




BREAKAWAY SIGN
PLACEMENT

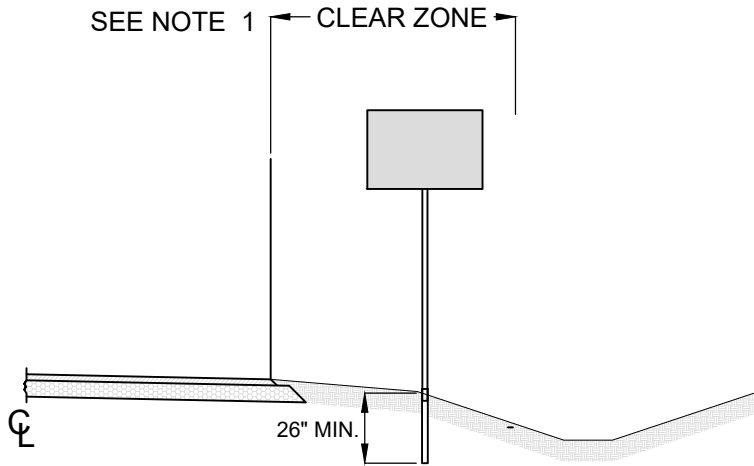

POST INSTALLATION

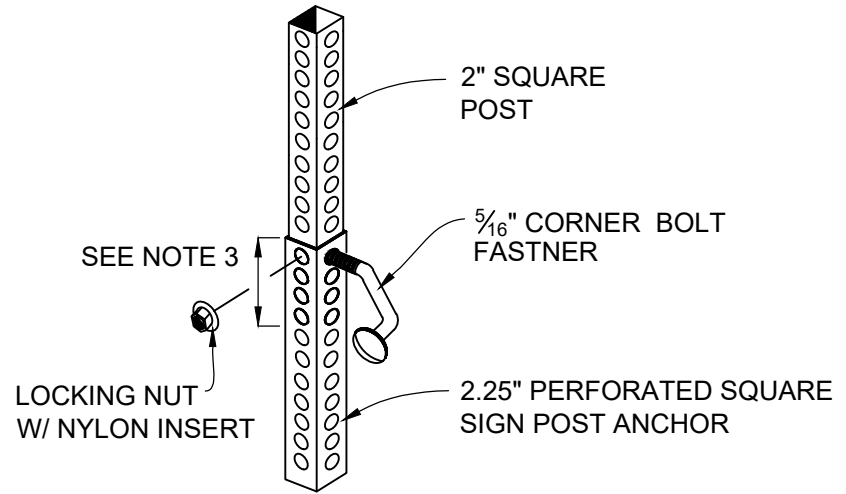

ANCHOR INSTALLATION

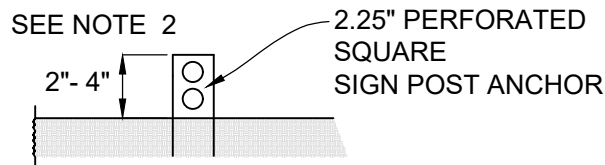

NOTES:

1. ON ALL ROADWAYS EXCEPT STREETS WITH STANDARD CURB AND GUTTER AND SPEED LIMITS EQUAL TO OR LESS THAN 25 MPH, ALL SIGNS WITHIN CLEAR ZONE SHALL BE OF A BREAKAWAY DESIGN THAT COMPLIES WITH THE LATEST EDITION OF AASHTO MANUAL FOR ASSESSING SAFETY HARDWARE (MASH) AND NCHRP REPORT 350.
2. DRIVE ANCHOR MINIMUM 26 INCHES INTO THE GROUND. LEAVE 2 INCHES MINIMUM TO 4 INCHES MAXIMUM TO PROTRUDE ABOVE SURFACE.
3. FIT POST INTO ANCHOR. FASTEN CORNER BOLT THROUGH THE FOURTH HOLE ON THE POST AND THE FIRST HOLE ON THE ANCHOR.